

# CHANGEABLE COMBINATION LOCK MANUAL

## I. SETTING ONE NUMBER: (Method 1)

The default number for All C lock safes is the number 50.

**1. ToUnlock:** Rotate the dial at least 4 times to the left (counter-clockwise) and set the number 50 directly in line with the long red stripe. Next, rotate the dial to the right (clockwise) until it cannot be rotated any more and unlock it. (If it does not unlock, repeat the steps from the beginning).

### 2. Setting the number:

- Make sure that the inside door is open.
- Press the auto bolt in the door side to push out the latches as if the lock were closed
- Rotate the dial toward the left and stop at the number 50. Then insert a number-changing key into the hole of the door and turn it to the left (counterclockwise) 90 degrees. Then turn the dial to the left until the number that you wish is aligned with the short red stripe.

**3. Forbidden zone(85-15),** Do not use numbers between 85 and 15 for your last number.

e.g. 51-87-14. For maximum security, do not use numbers ending in 0 or 5 and do not use numbers in a rising or falling sequence. e.g. 33-48-75 or 73-49-33.

**Note:** The number you have set must be aligned with the short red stripe. After setting your secret number, turn the number-changing key to the right (clockwise) 90 degrees, back to its previous position and take it out. Remember to re-unlock and test the new number as in step 1.

## II. SETTING 03 NUMBERS:

1. Unlock the door with the previous number as in step 1 of method 1.

2. Do as in step 2 in method 1: Always align numbers with the short red stripe.

3. After aligning the previous number with the short red stripe, insert the number-changing key into the hole of the door and turn it to the left (counter-clockwise) 90 degrees. Rotate the dial 04 times toward the right and align your chosen number with the short red stripe. Finally, rotate the dial 02 times to the left and align the next number with the short red stripe. Then turn the number changing key to the to the right (clockwise) 90 degrees, back to its previous position, and take it out.

### \* Unlock:

Like the method of setting 03 numbers, you must rotate the correct number of times, in the correct direction. When unlocking, all three numbers must be aligned with the long red stripe as in step 1 of method 1. When all three numbers have been correctly aligned, re-rotate the dial to the right (clockwise) *slowly* until it cannot turn any more, and open the cabinet.

The dial must be rotated correctly in the indicated direction. Try to turn the dial smoothly, and avoid jerky or twitchy movements. If the dial is rotated wrongly, or too many times, it must be returned to the initiation position.

## DOUBLE STRIPE C LOCK:

