Instruction manual for safe NE lock

How to open

Enter the initial code of *1 2 3 4 5 6# in sequence, and press # botton.

LED will be a blue light with a melody, and then turn right the handle to open.

■ How to change new personal code : Ex) * \rightarrow M button \rightarrow New personal code \rightarrow

- 1. First of all, the using personal code and open the safe door
- 2. Press * start button, and press a button in a black hole on the back of the door. (You will hear a single beep and the red light at no.8 of safe will flash)
- 3. Enter your new personal code (1-20 digit) and press # button within 3 seconds. (You will hear a single beep and the blue light at No.5 of safe will flash.)
 - ➤ Before closing the door, please try and check your new code bye the opening procedure while door is still open.
 - Password initialization method: Press and hold the inner face of the safe (M) button for more than 3 seconds (success on beep)

■ Safety function

If the wrong code is entered consecutively more than 3 times, the lock will cease to function and will be inoperable for 30 seconds. (the red light on button 8 is blinking)

Convenient the silent and sound function

- Press *, and then press "1" button for over 3 seconds, sound 'beep' and then change the butten to the silence.
- > Sound function is re-enabled when operated in the same way as above

■ When is it time for a new battery (Do not mix old and new batteries)

When appear an inability to open in spite of the blue light or the **handle**, **button**, **sound and key** are not working properly, all 4 batteries must be replaced with new batteries.

To change the batteries

- 1. NE lock battery cover is on the inside of the safe
- 2. Remove the old batteries and replace all them with new ones, Insert 4 AA alkaline batteries, making sure the plus (+) and minus (-) signs are correctly aligned.

When the NE Lock the battery is discharged

The buzzer sounds when the 9V battery terminal attached to the bottom terminal of the lock and Open the safe by clicking on the password. (Press the password, until open the safe, don't disconnect the 9V battery from the terminal)

