

## Instruction manual for safe

### ■ How to open

Enter the initial code of \*1 2 3 4 5 6# in sequence, and press # button.

LED will be a blue light with a melody, and then turn the key or knob handle to turn the clockwise to open.

### ■ How to change new personal code

1. When the door is open
2. Press \* start button, and press the Memory on the back of the door.
3. And then "USE-01" will be shown on the screen, and LED will be on a red light with a "beep" sound.
4. Enter your new personal code (1-20 digit) and press # button within 5 seconds, LED will be changed blue light with a melody.
5. (e.g \*0 0 0 0 # = 4 digit)  
Before closing the door, please try and check your new code by the opening procedure while door is still open.

### ■ Safety function

If the wrong code is entered consecutively more than 3 times, the lock will cease to function and will be inoperable for 30 seconds.

### ■ Convenient function

1. Hiding and Displaying the digit on the screen
  - Press \* for 3 seconds, the word of "FND-OFF" or "FND-ON" will be shown on the screen.
2. Converting the silent and sound mode
  - Press \*, and then press "1" button for over 3 seconds, the word of "Sn-ON" or "Sn-OFF" will be shown on the screen.

### ■ when is it time for a new battery

When appear "L-Batt" on the screen, or an inability to open in spite of the blue light, all batteries must be replaced with new batteries.

### ■ To change the batteries

1. Remove the battery cover which is on the right side of keypad.
2. Remove the old batteries and replace all them with new ones, Insert 4 AA alkaline batteries, making sure the plus (+) and minus (-) signs are correctly aligned.  
Do not mix old and new batteries.
3. Replace the battery cover.